



VARISCITE LTD.

---

## 5GHz mFlexPIFA ANTENNA

Variscite PN: VAC-ANT\_5\_FlexPIFA

LSR PN: mFlexPIFA 001-0016



VARISCITE LTD.

# VAC-ANT\_5\_FlexPIFA Datasheet

---

© 2023 Variscite Ltd.

All Rights Reserved. No part of this document may be photocopied, reproduced, stored in a retrieval system, or transmitted, in any form or by any means whether, electronic, mechanical, or otherwise without the prior written permission of Variscite Ltd.

No warranty of accuracy is given concerning the contents of the information contained in this publication. To the extent permitted by law no liability (including liability to any person by reason of negligence) will be accepted by Variscite Ltd., its subsidiaries or employees for any direct or indirect loss or damage caused by omissions from or inaccuracies in this document.

Variscite Ltd. reserves the right to change details in this publication without notice. Product and company names herein may be the trademarks of their respective owners.

Variscite Ltd.  
4, Hamelacha Street  
Lod  
P.O.B 1121  
Airport City, 70100  
ISRAEL

Tel: +972 (9) 9562910  
Fax: +972 (9) 9589477

# Table of Contents

1.	Features and Benefits .....	4
2.	Mechanical Drawing .....	5
3.	Test Setup.....	6
4.	Flat Surface Antenna Measurements.....	7
4.1	Return Loss.....	7
5.	Flat Surface Antenna Radiation Performance .....	8
5.1	Results – Flat Surface .....	9
6.	Curved Surface Antenna Radiation Performance .....	13
6.1	Results – Curved Surface .....	14
7.	Optimal Installation Guide.....	23
7.1	Flex Limits of the mFlexPIFA.....	25
8.	Mounting on Metal and Loaded Applications .....	26
9.	Product Revision History .....	28
10.	Additional Assistance .....	29

# 1. Features and Benefits

- Dual band antenna – 2.4 GHz and 5.5 GHz
- Quick and easy installation
- Adhesive holds to surface during humidity exposure and hot/cold cycles
- RoHS-compliant
- Can be installed in the following ways:
  - On different non-conductive surfaces and thicknesses
  - Near metals or the human body
  - On flat or curved surfaces

Specifications		Value
Frequency (MHz)	2400 - 2480	4900 - 5900
Peak Gain (dBi)	+2.5	+3.0
Average Gain (dBi)	> -2.5	> -3.4
VSWR (MHz)	<2.5:1	<3.0:1
Impedance (Ω)	50	
Antenna Type	Flexible Planar Inverted F (FlexPIFA)	
Polarization	Linear	
Mechanical Specifications		Value
Dimensions – mm (inches)	38.5 x 12.7 x 2.5 (1.52 x 0.5 x 0.098)	
Weight – g (oz.)	1.13 (0.040)	
Color	Clear yellow	
Adhesive	3M 100MP	
Connector Mating Height (max) – mm	MHF1 (U.FL)	2.5
Environmental Specifications		Value
Operating Temperature – °C (°F)	-40 to +85°C (-40 to +185°F)	
Material Substance Compliance	RoHS	

## Configuration

Part Number	Cable Length	Connector
001-0016	100 mm	U.FL

## 2. Mechanical Drawing


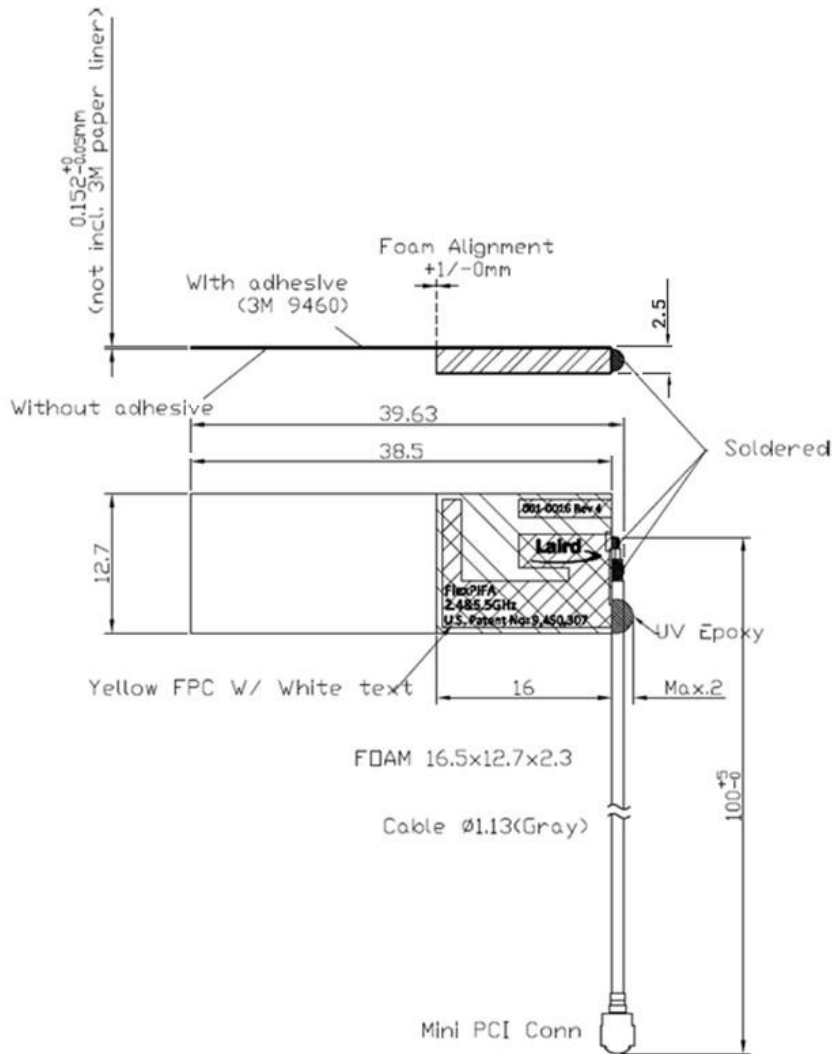


Figure 1: FlexPIFA mechanical drawing

### 3. Test Setup

Antenna measurements such as VSWR were measured with an Agilent E5071C vector network analyzer. Radiation patterns were measured with a CMT Planar 804/1 vector network analyzer in a Howland Company 3100 chamber equivalent. Phase center is nine inches above the Phi positioner.


Flat surface measurements were done with the antenna centered on a 1.5 mm-thick plate of polycarbonate. Curved surface measurements were taken by placing the antenna on the inside and outside of different diameter PVC tubing.

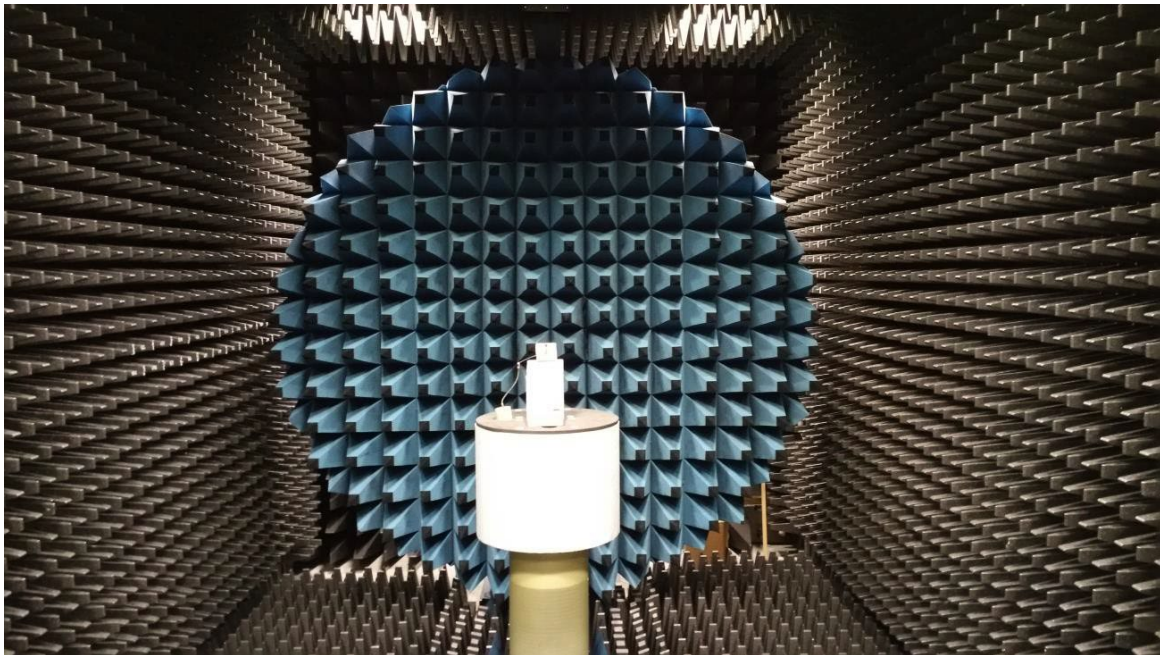

*Figure 2: Antenna Chamber*

## 4. Flat Surface Antenna Measurements

### 4.1 Return Loss

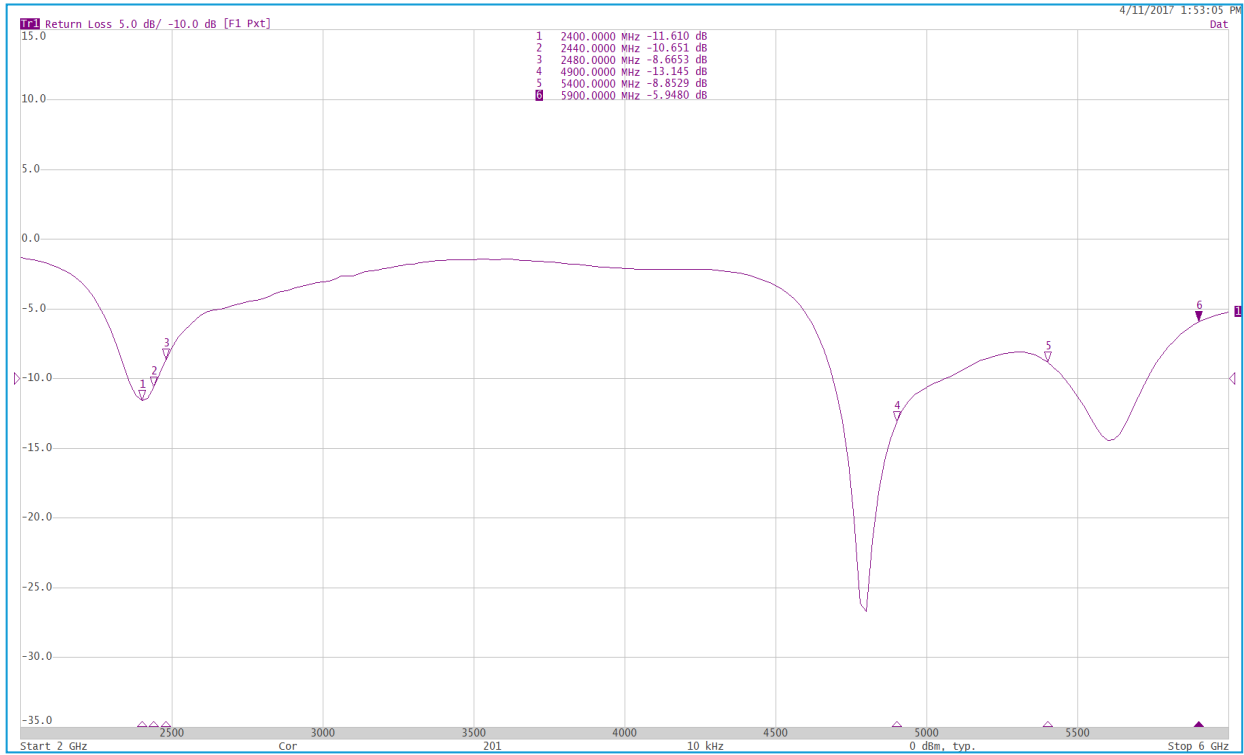


**Figure 3: Antenna RL measured on a 1.5 mm-thick plate of polycarbonate**

## 5. Flat Surface Antenna Radiation Performance

FlexPIFA centered on a 1.5 mm-thick plate of polycarbonate

*Antenna Measurement Set-Up*

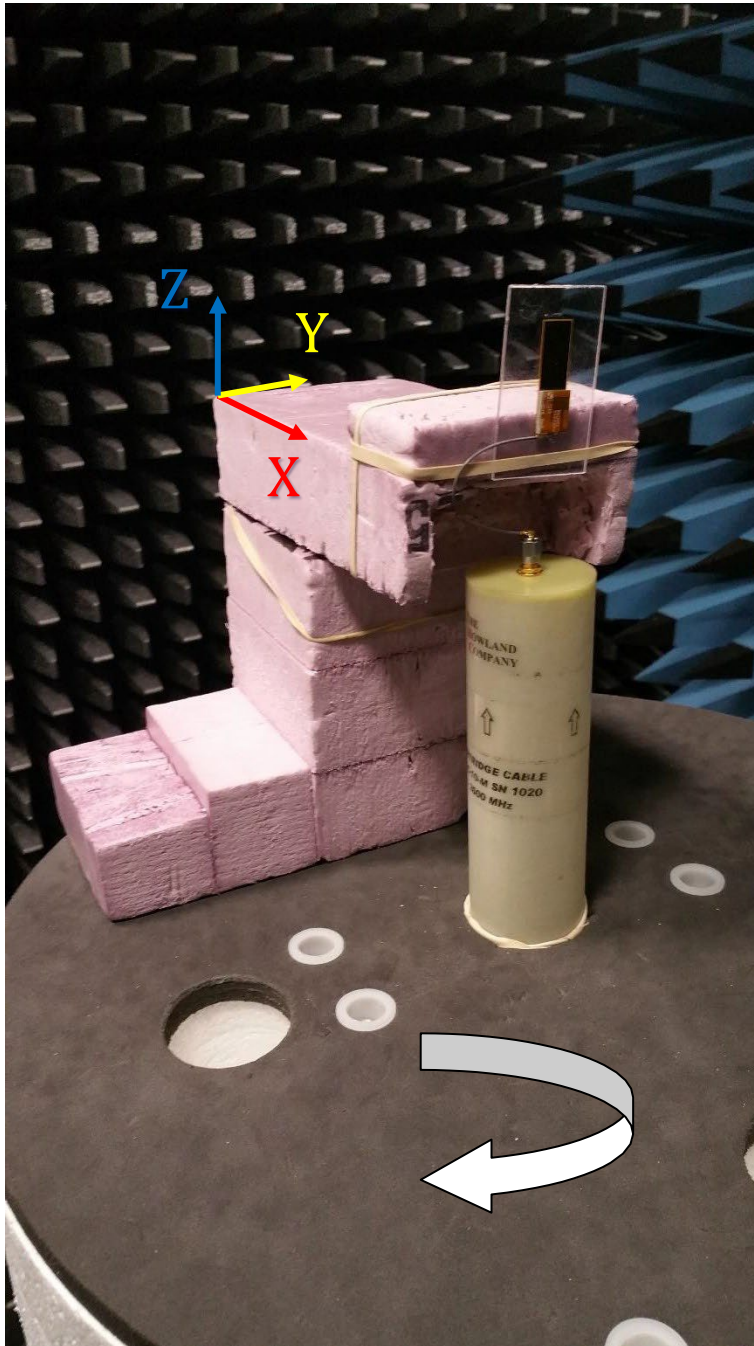

**Figure 4: Flat surface setup**




## 5.1 Results – Flat Surface

### 2.4 GHz Band


Azimuthal Conical Cuts at 2440 MHz

**Azimuth Gain Pattern Cuts - Total Gain at 2440 MHz**

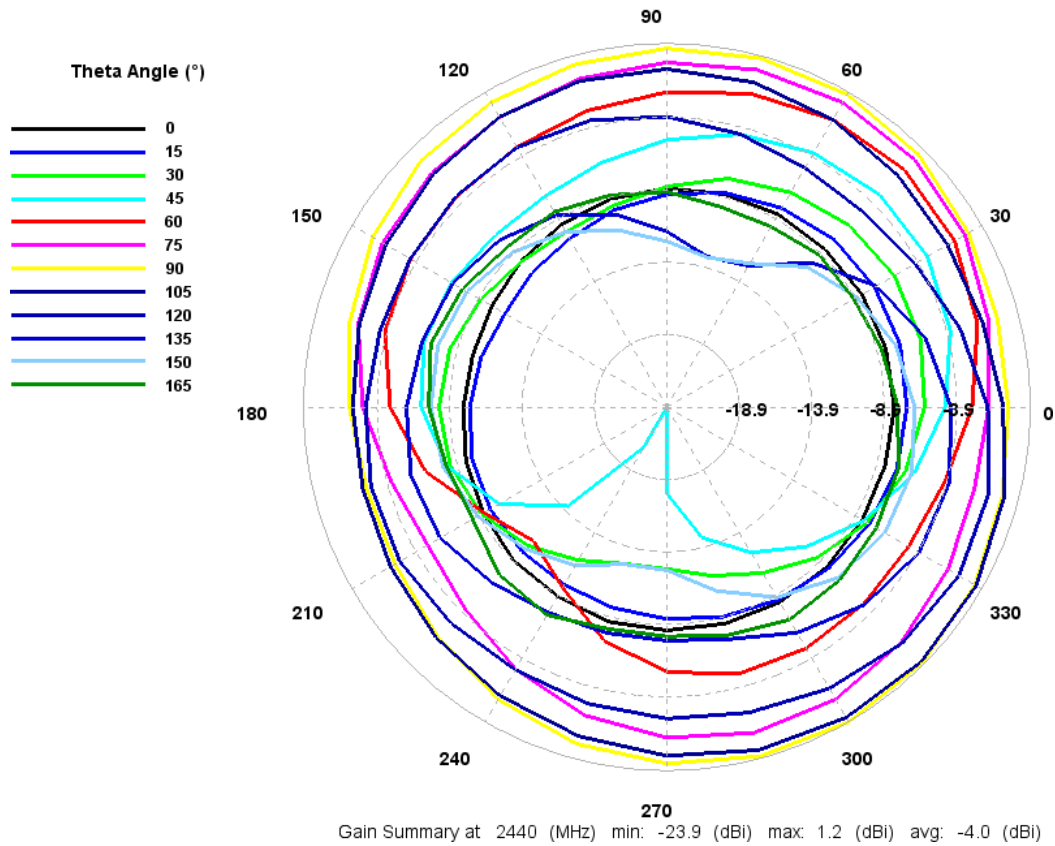

**Figure 5: Total gain pattern**

3D Plots at 2440 MHz

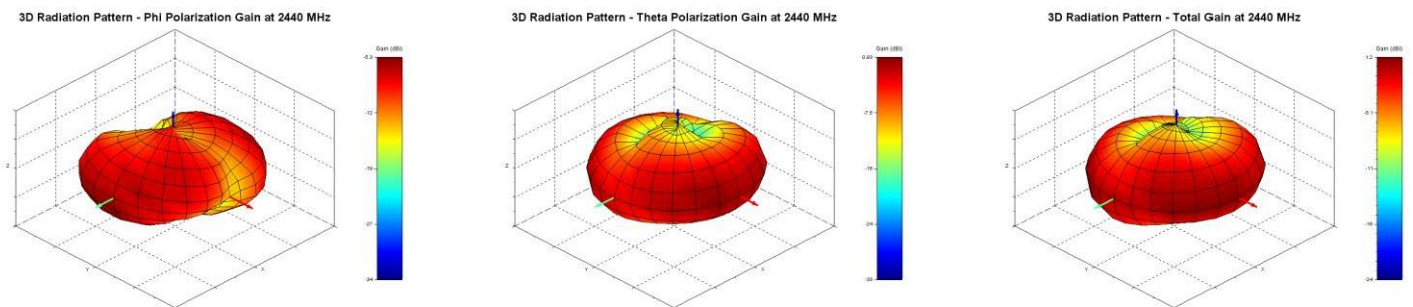

**Figure 6: Phi, Theta, and total gain plots**

5 GHz Band

Azimuthal Conical Cuts at 4900 MHz

Azimuth Gain Pattern Cuts - Total Gain at 4900 MHz

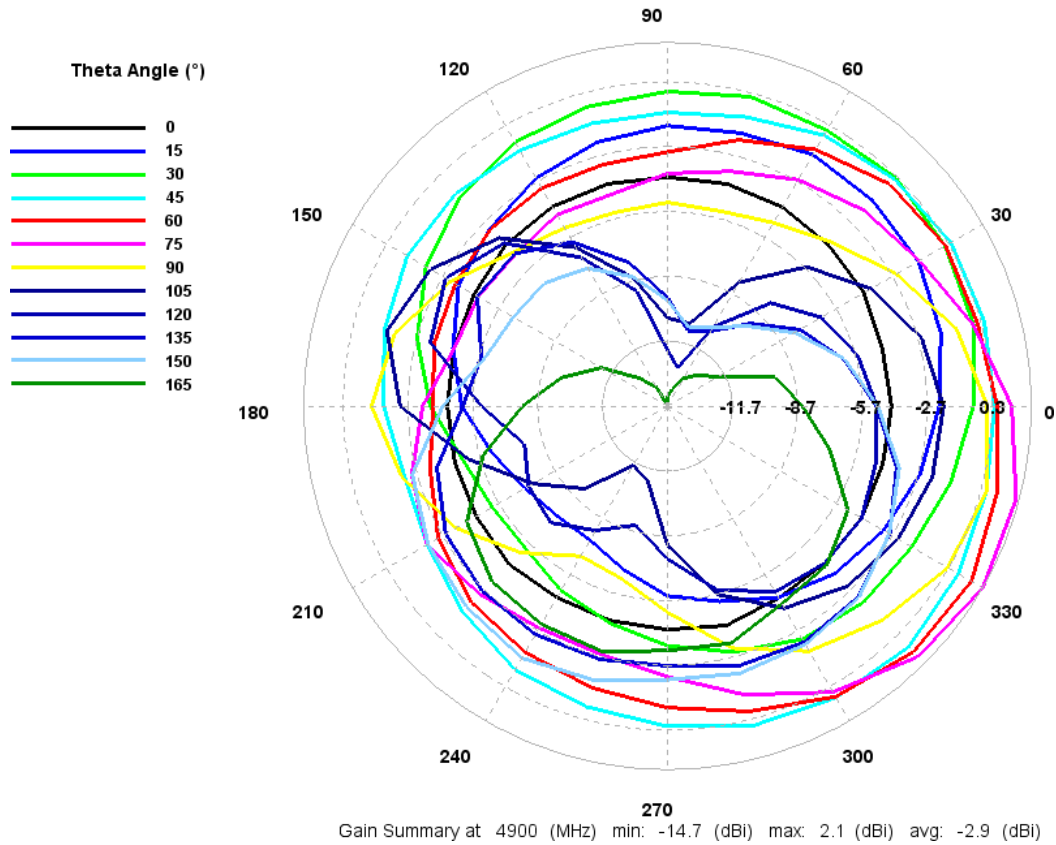


Figure 7: Total gain pattern

3D Plots at 4900 MHz


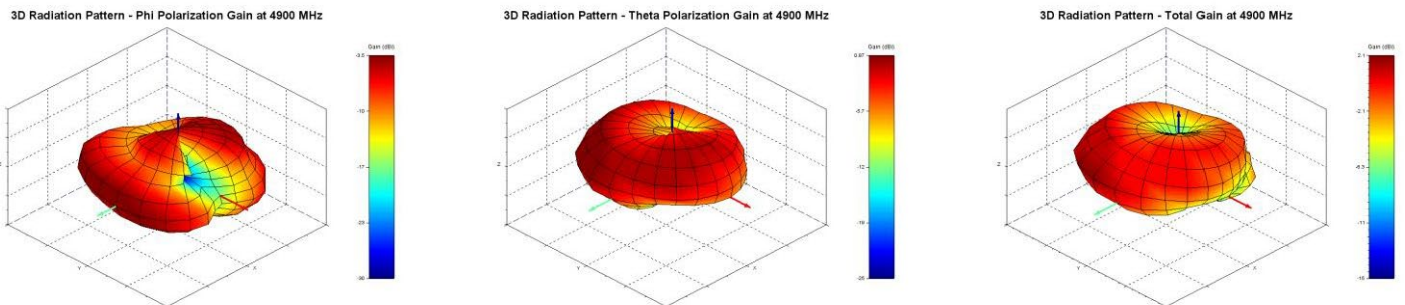



Figure 8: Phi, Theta, and total gain plots

Azimuthal Conical Cuts at 5400 MHz

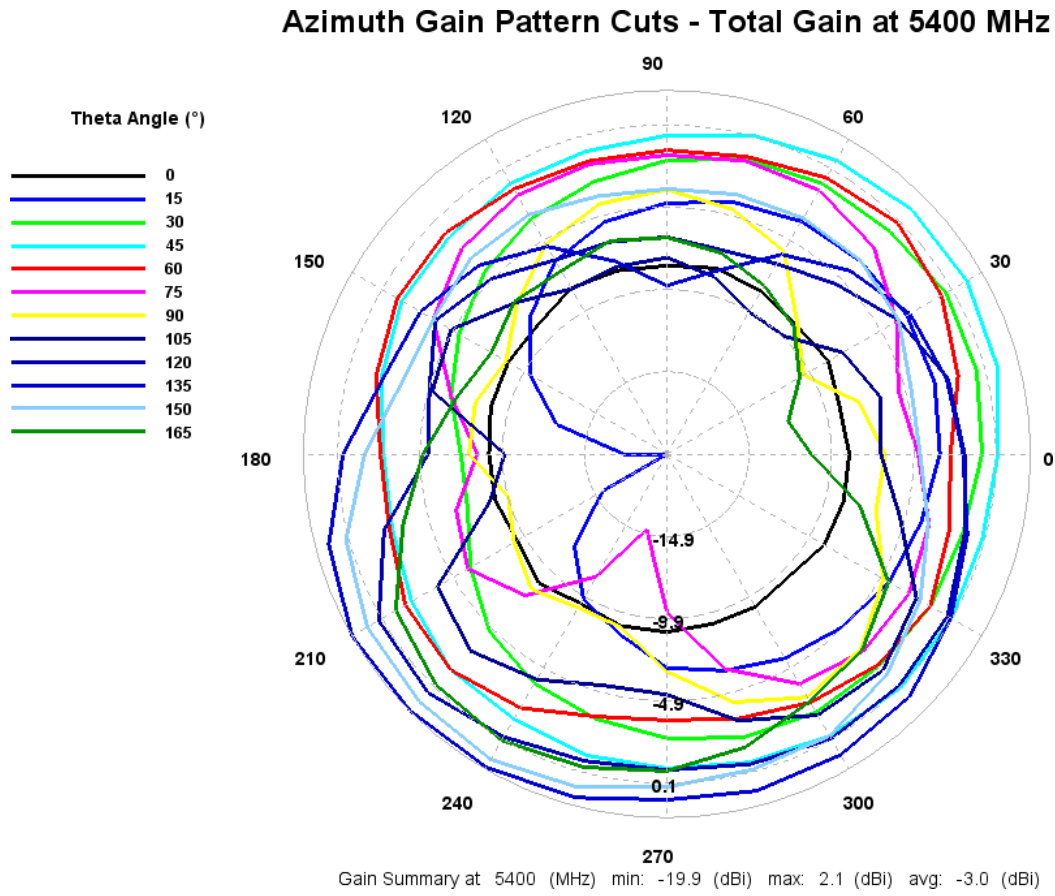


**Figure 9: Total gain pattern**

3D Plots at 5400 MHz

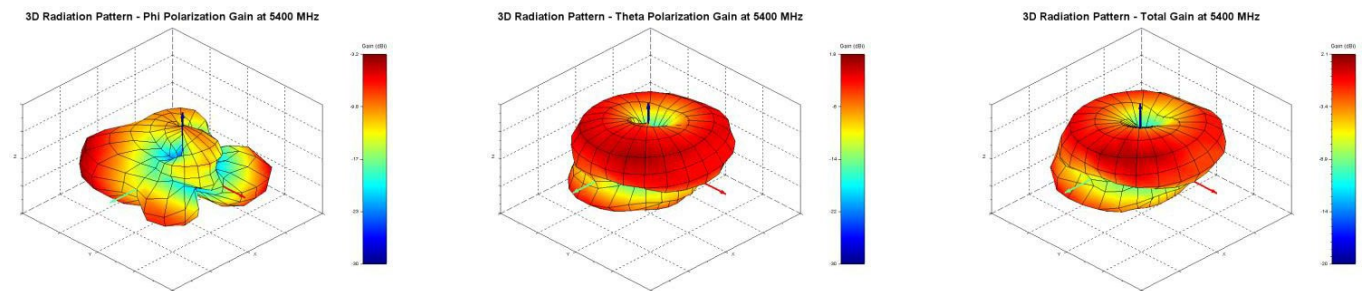


**Figure 10: Phi, theta, and total gain plots**

Azimuthal Conical Cuts at 5900 MHz

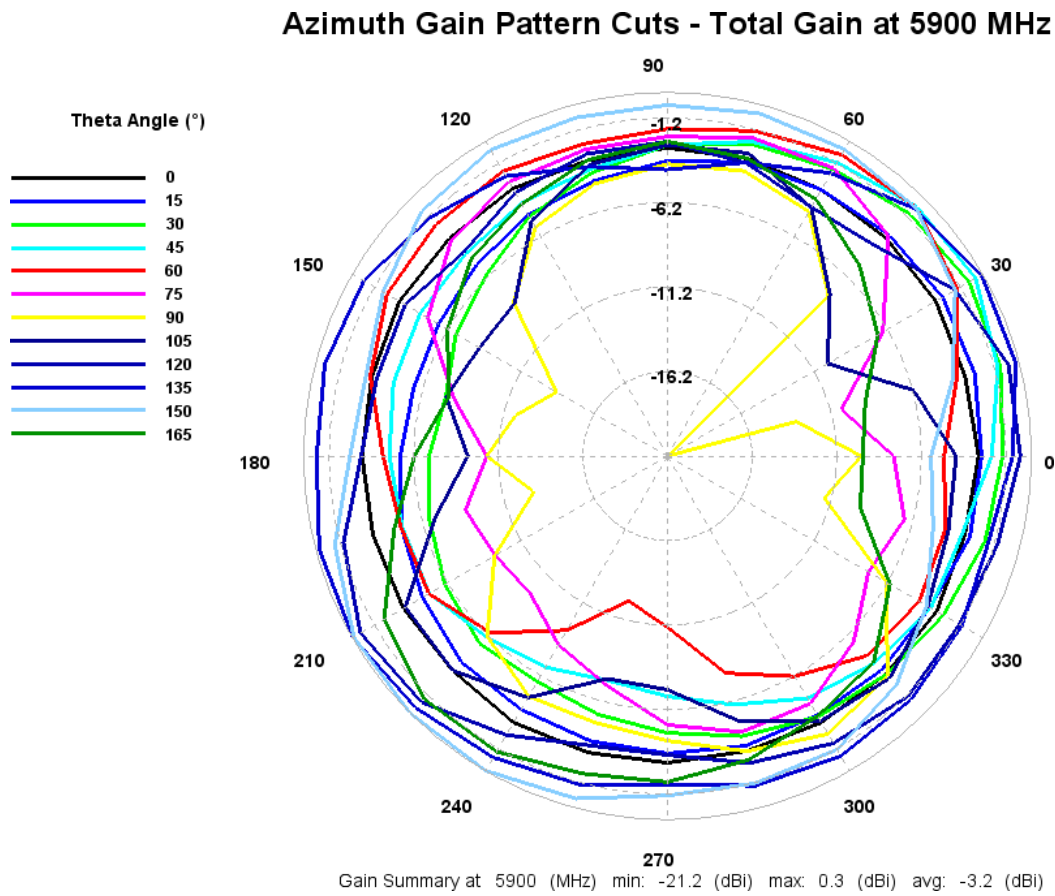

**Figure 11: Total gain pattern**

3D Plots at 5900 MHz

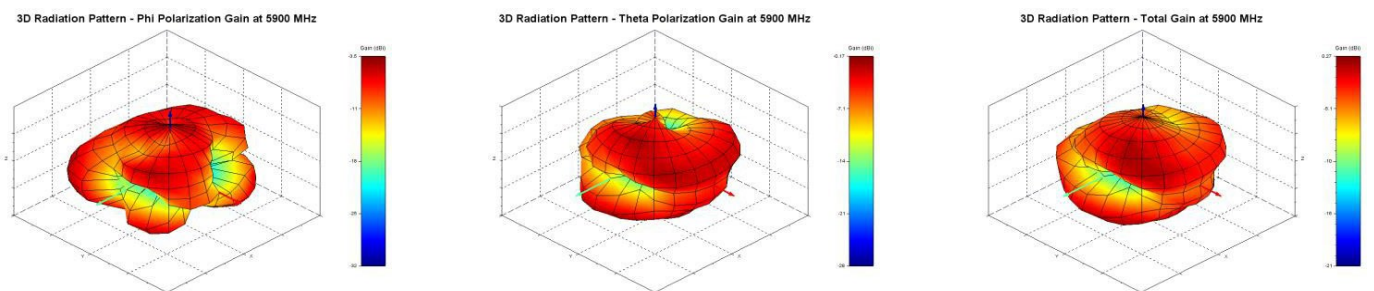

**Figure 12: Phi, theta, and total gain plots**

## 6. Curved Surface Antenna Radiation Performance

FlexPIFA outside 60 mm outer diameter PVC tube

Antenna Measurement Set-Up


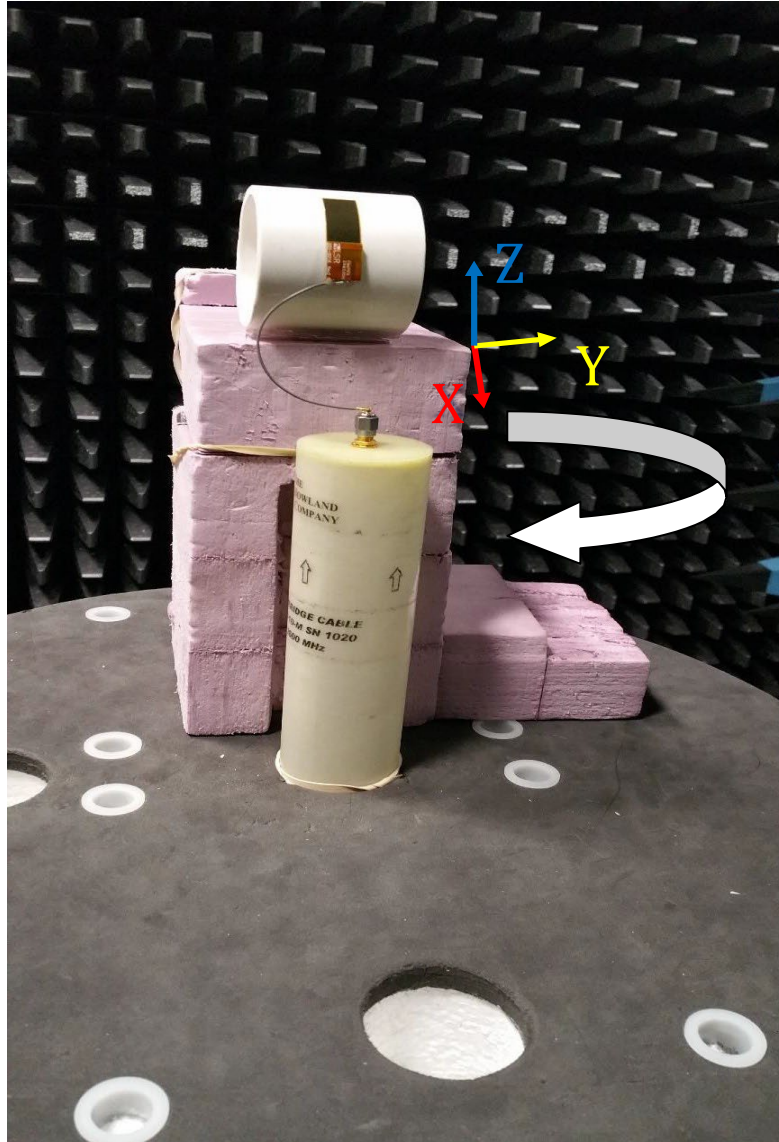


Figure 13: Outer diameter setup

## 6.1 Results – Curved Surface


### 2.4 GHz Band

Azimuthal Conical Cuts at 2440 MHz

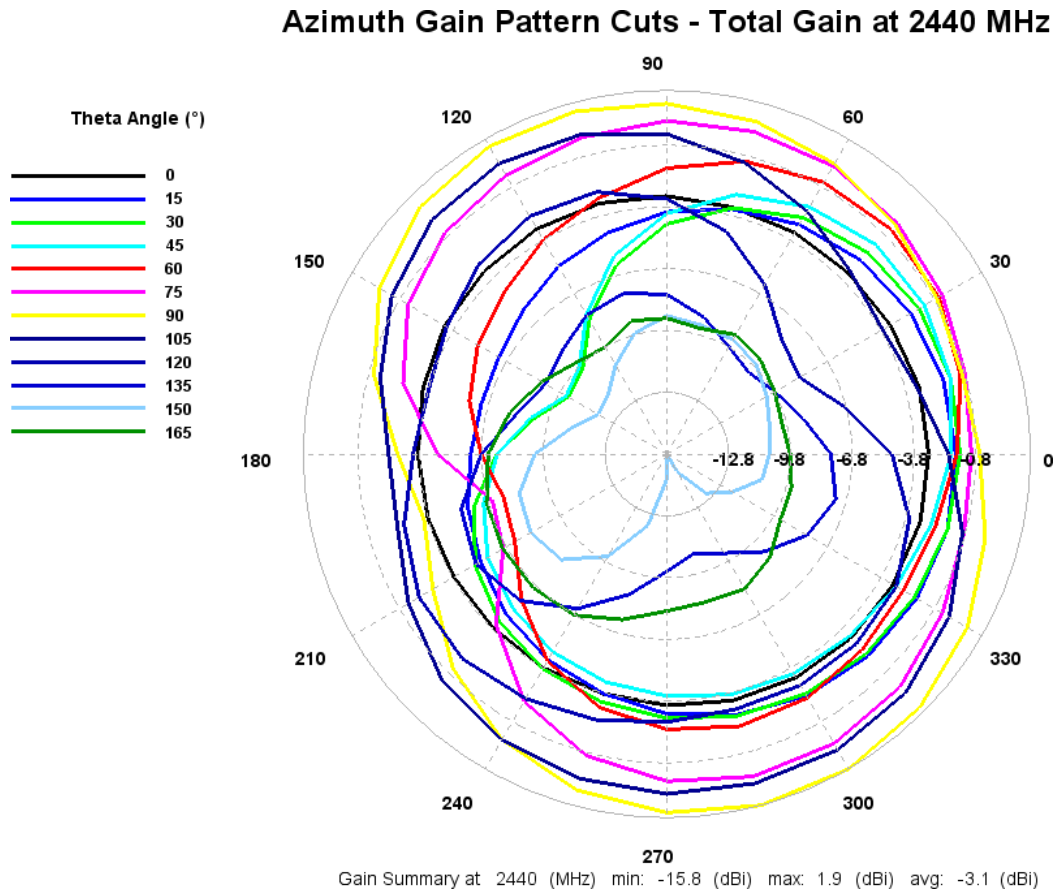

**Figure 14: Total gain pattern**

3D Plots at 2440 MHz

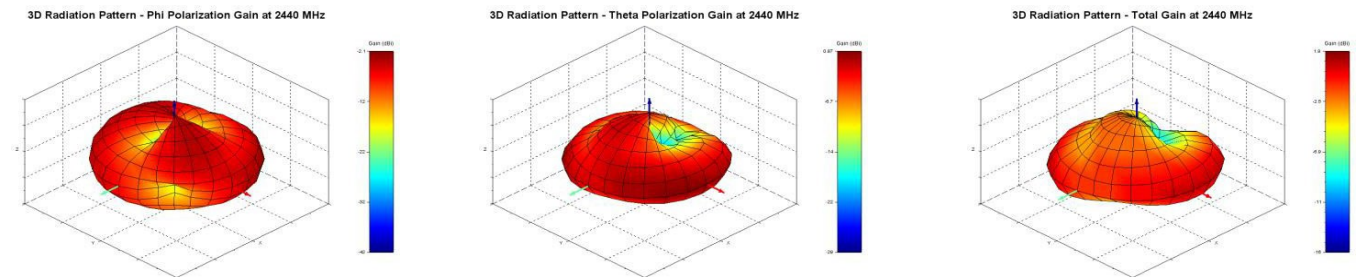

**Figure 15: Phi, theta, and total gain plots**

### 5 GHz Band

Azimuthal Conical Cuts at 4900 MHz

### Azimuth Gain Pattern Cuts - Total Gain at 4900 MHz

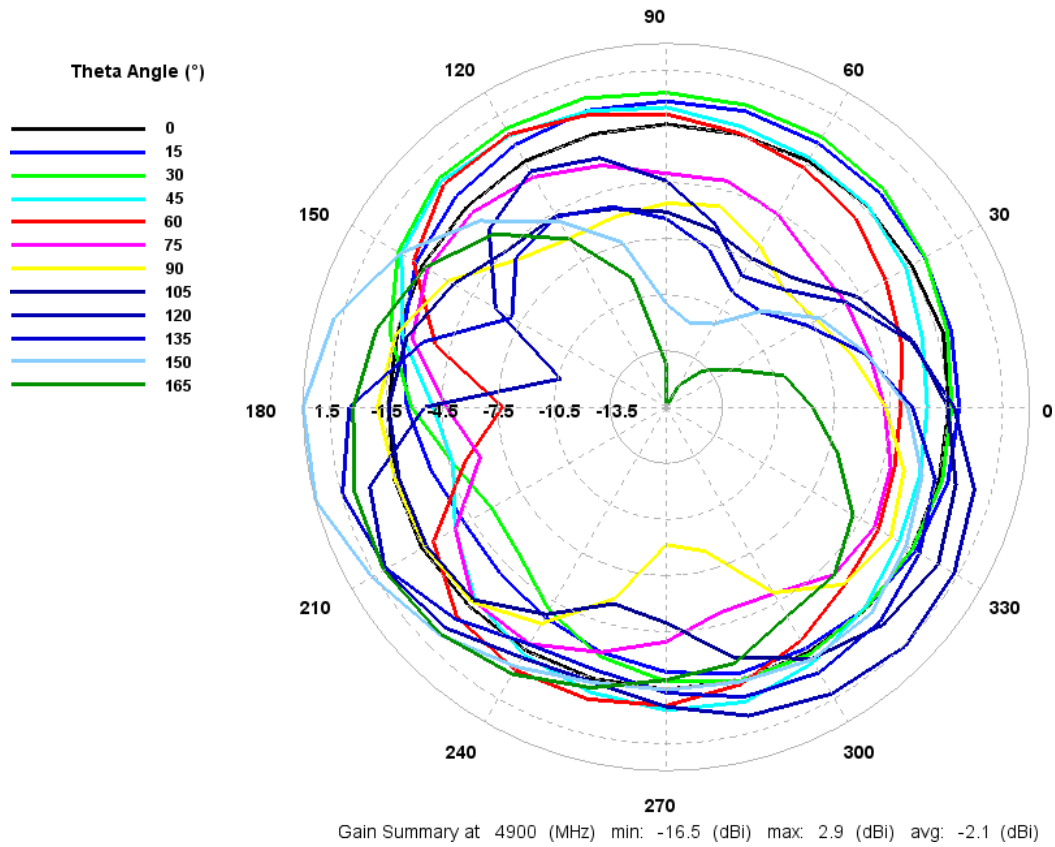


Figure 16: Total gain pattern

### 3D Plots at 4900 MHz


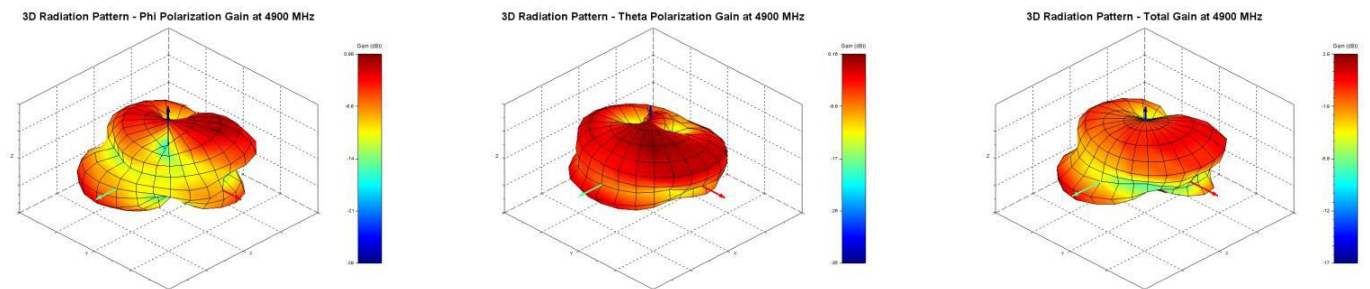


Figure 17: Phi, Theta, and total gain plots


### Azimuthal Conical Cuts at 5400 MHz

**Azimuth Gain Pattern Cuts - Total Gain at 5400 MHz**

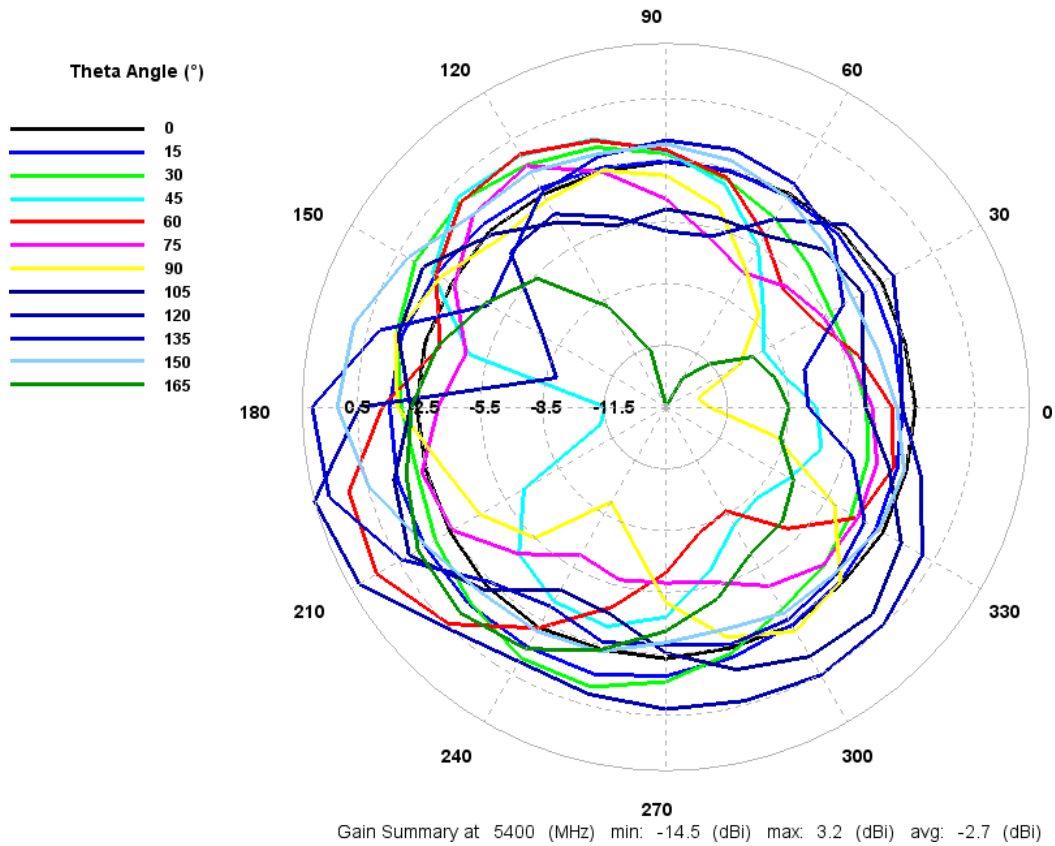

**Figure 18: Total gain pattern**

3D Plots at 5400 MHz

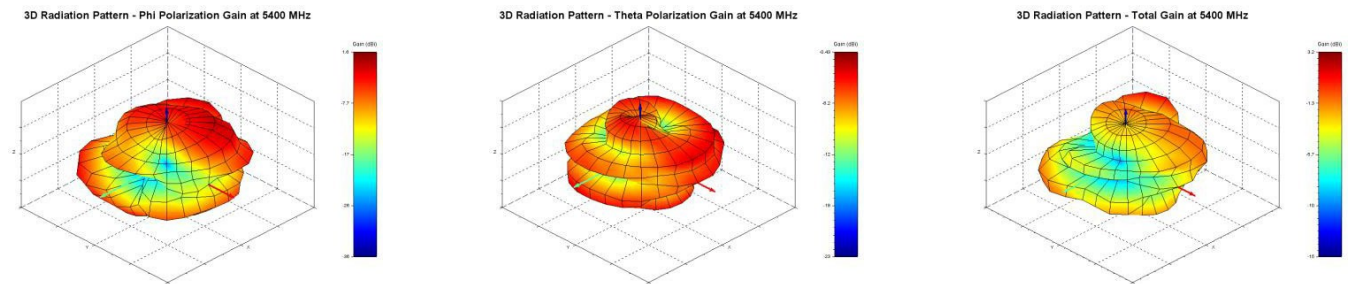


**Figure 19: Phi, Theta, and total gain plots**

Azimuthal Conical Cuts at 5900 MHz




### Azimuth Gain Pattern Cuts - Total Gain at 5900 MHz

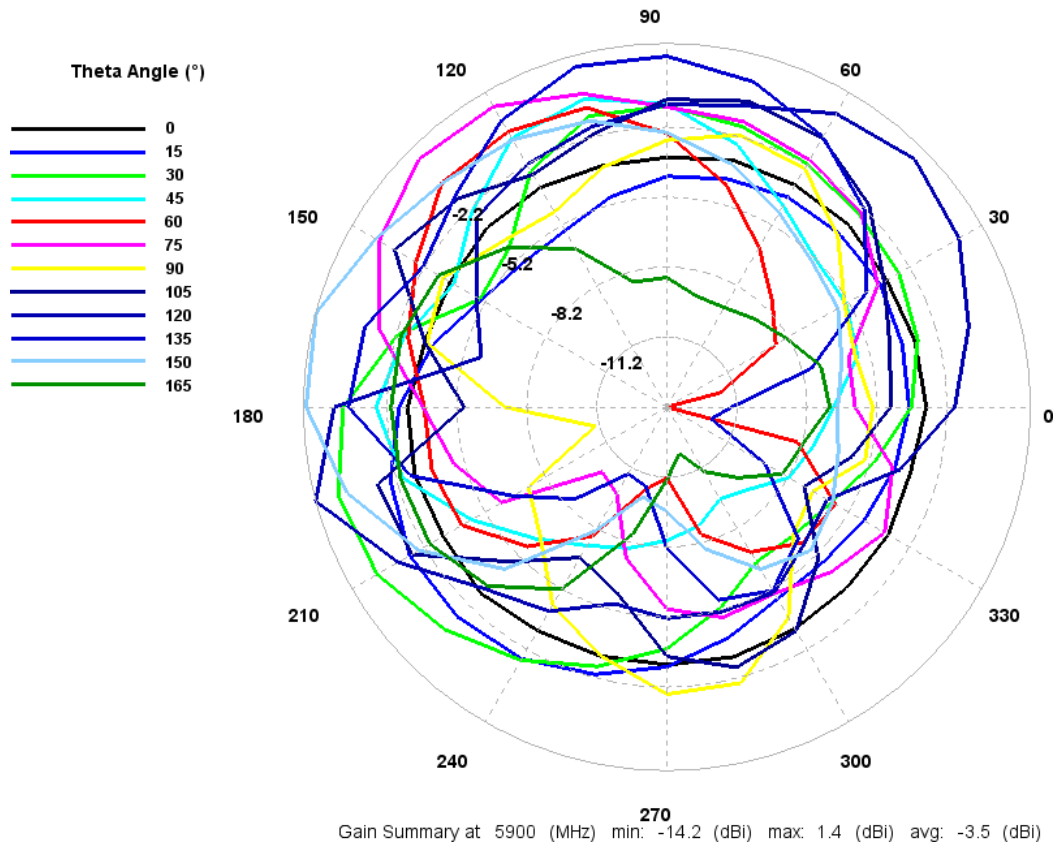

**Figure 20: Total gain pattern**

### 3D Plots at 5900 MHz

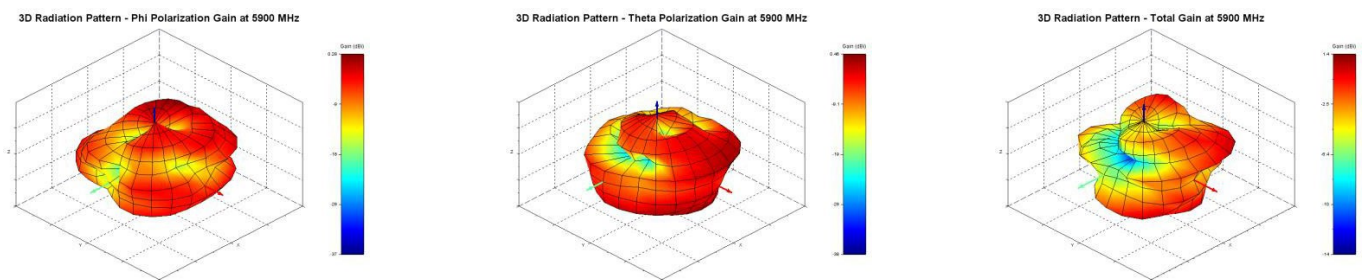

**Figure 21: Phi, Theta, and total gain plots**

FlexPIFA inside 52 mm inner diameter PVC tube

Antenna Measurement Setup


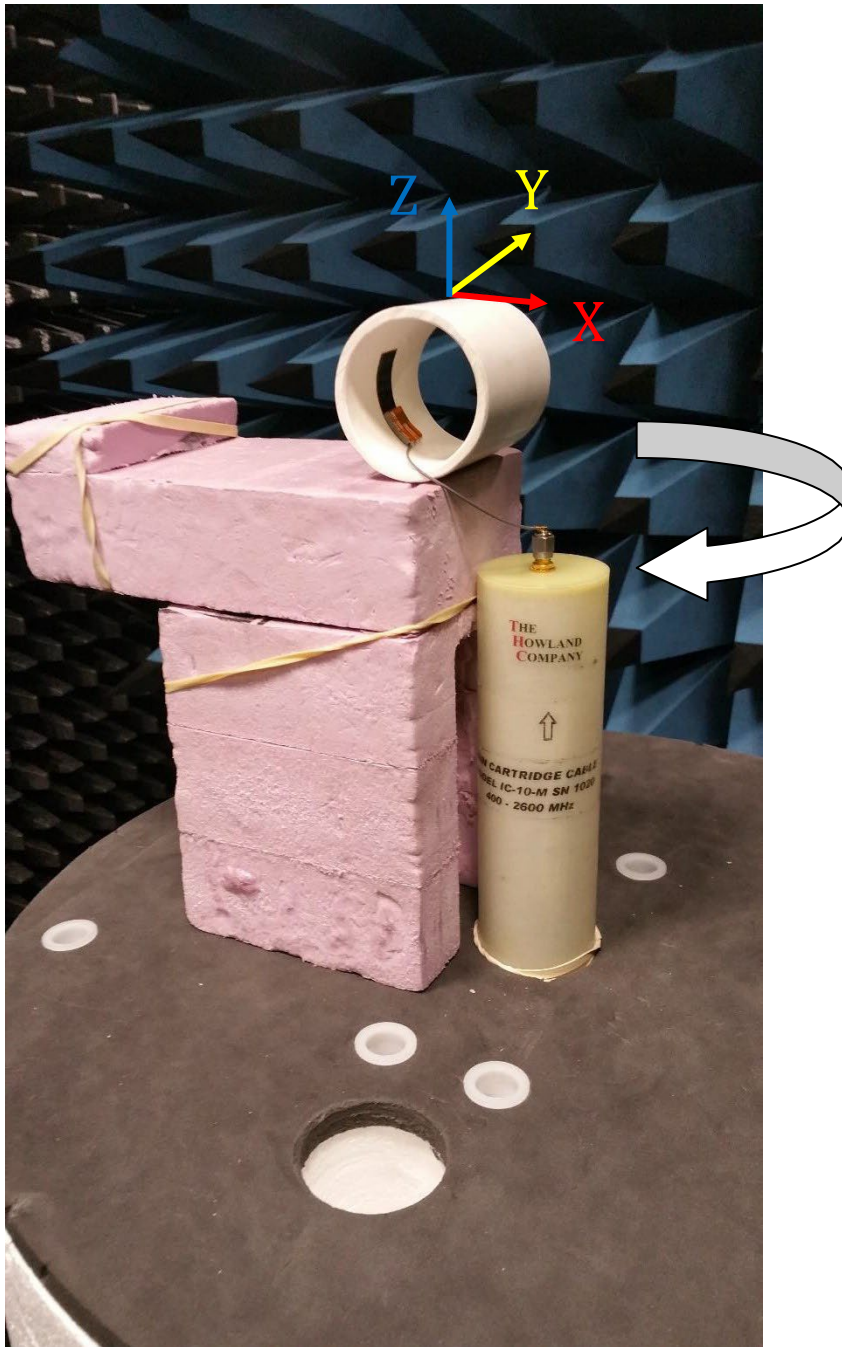


Figure 22: Inner diameter setup


## 2.4 GHz Band

Azimuthal Conical Cuts at 2440 MHz

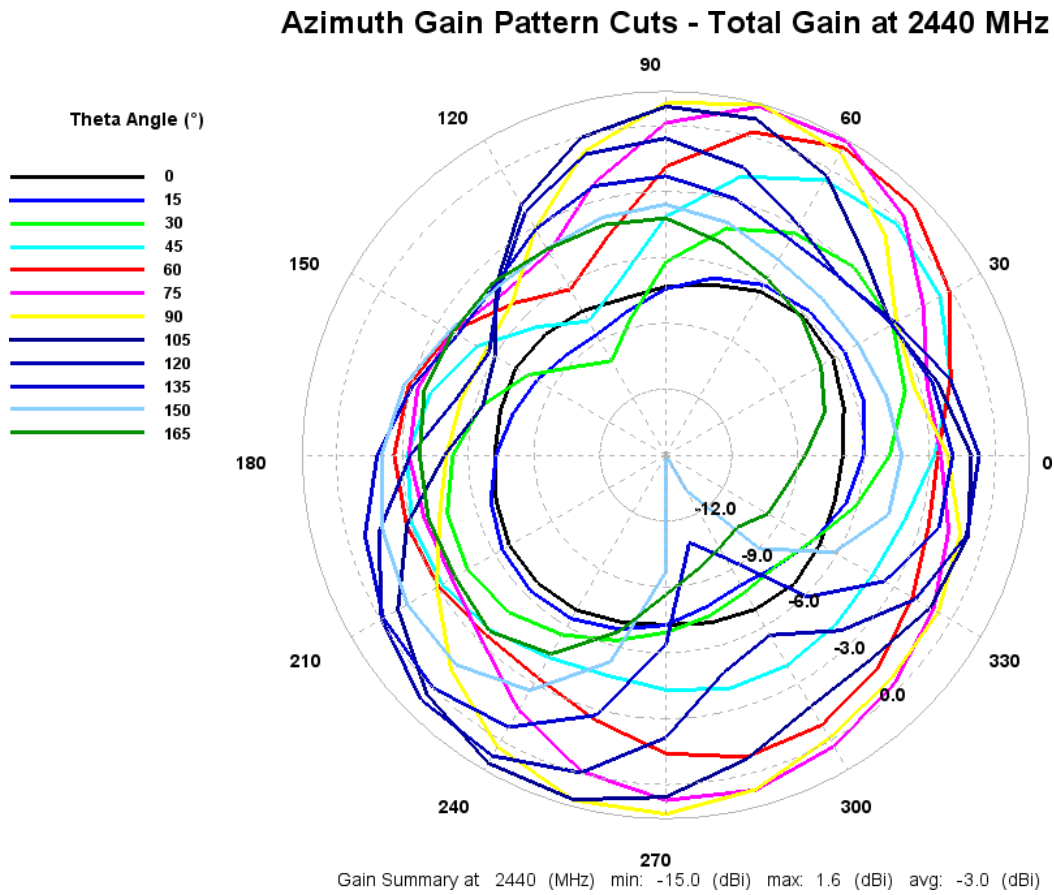

**Figure 23: Total gain pattern**

3D Plots at 2440 MHz

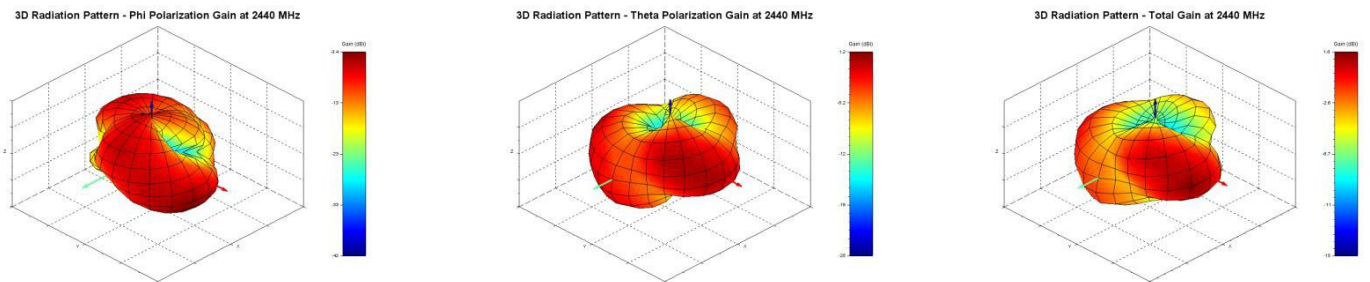

**Figure 24: Phi, Theta, and total gain plots**

5 GHz Band

Azimuthal Conical Cuts at 4900 MHz

Azimuth Gain Pattern Cuts - Total Gain at 4900 MHz

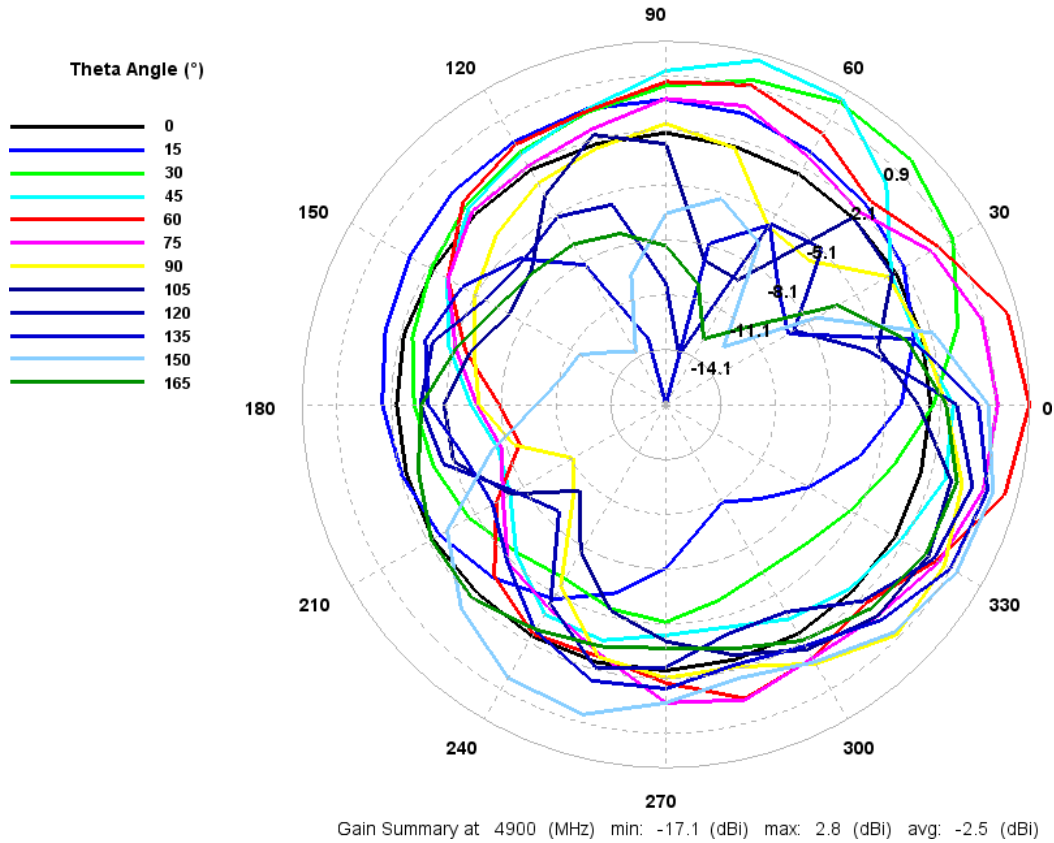


Figure 25: Total gain pattern

3D Plots at 4900 MHz


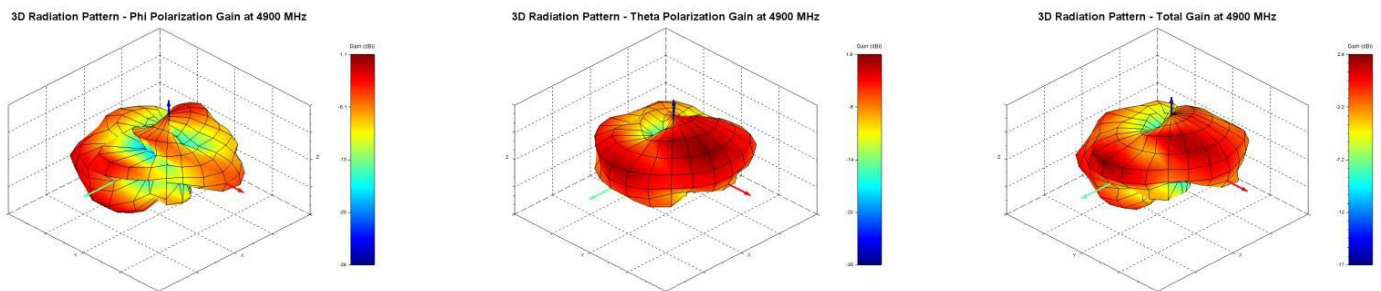


Figure 26: Phi, Theta, and total gain plots


Azimuthal Conical Cuts at 5400 MHz

**Azimuth Gain Pattern Cuts - Total Gain at 5400 MHz**

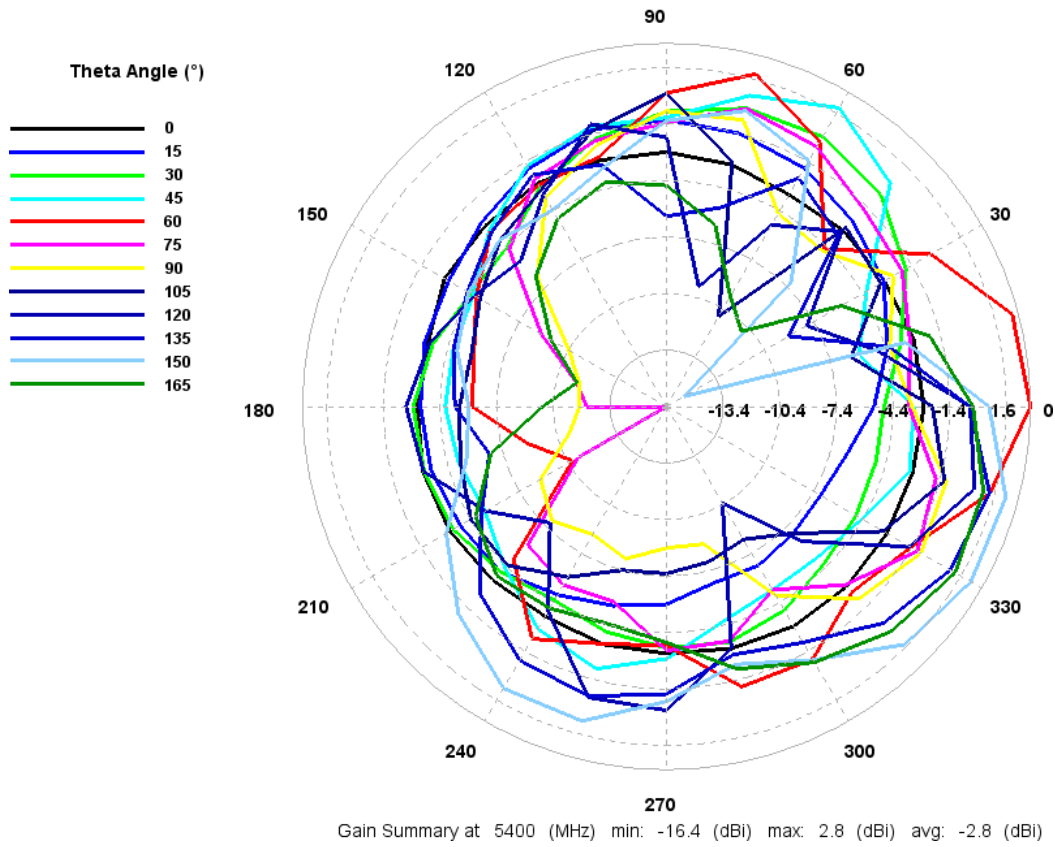

**Figure 27: Total gain pattern**

3D Plots at 5400 MHz

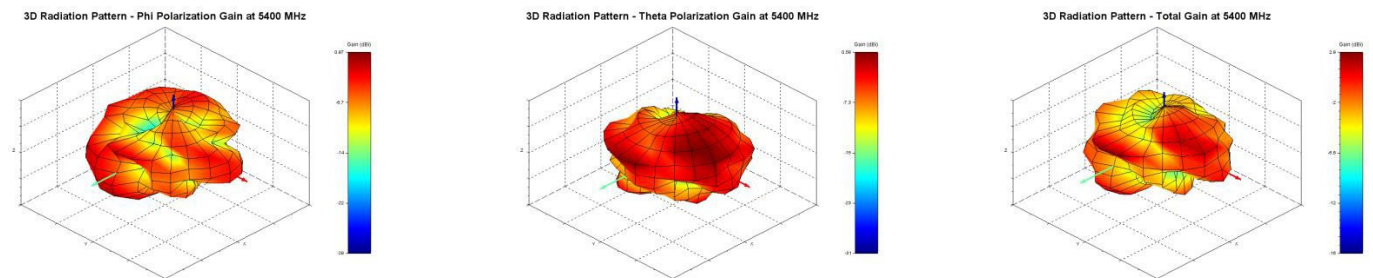

**Figure 28: Phi, Theta, and total gain plots**

Azimuthal Conical Cuts at 5900 MHz

Azimuth Gain Pattern Cuts - Total Gain at 5900 MHz


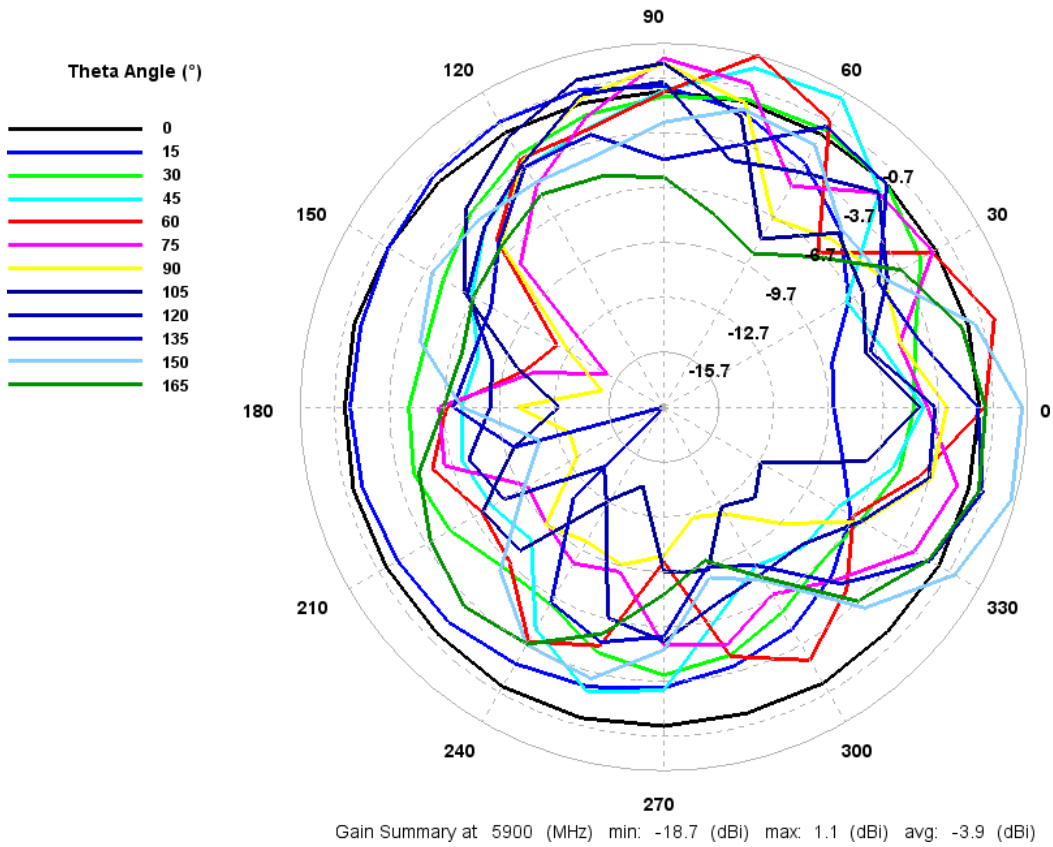



Figure 29: Total gain pattern

3D Plots at 5900 MHz

3D Radiation Pattern - Phi Polarization Gain at 5900 MHz

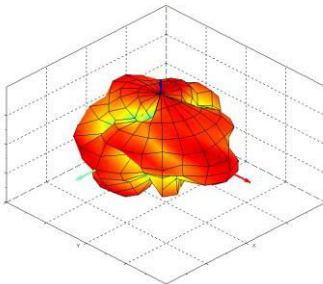

3D Radiation Pattern - Theta Polarization Gain at 5900 MHz

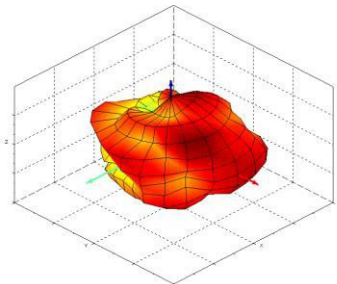

3D Radiation Pattern - Total Gain at 5900 MHz


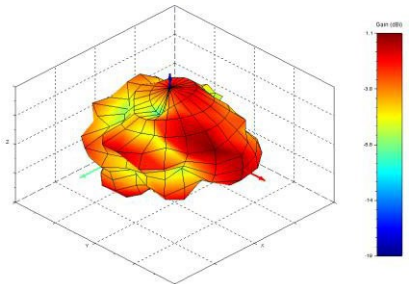



Figure 30: Phi, Theta, and total gain plots

## 7. Optimal Installation Guide

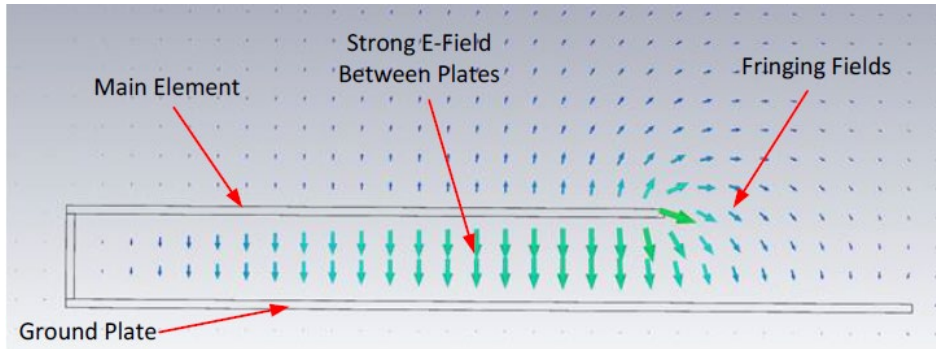


**Figure 31: E-field radiation from FlexPIFA – taken from CST simulation**

The main element should be kept clear of any non-metal objects (such as plastics) on top of it by at least three millimeters (see Figure 32). Similarly, the two long sides of the FlexPIFA should be kept clear of any non-metal object by at least two millimeters (See Figure 33). A one-millimeter clearance should be observed from the ground wall to any non-metal object. Mounting the FlexPIFA in a situation that does not allow for these clearance recommendations may change the gain characteristics stated in the datasheet, which could impact overall range of the wireless system.

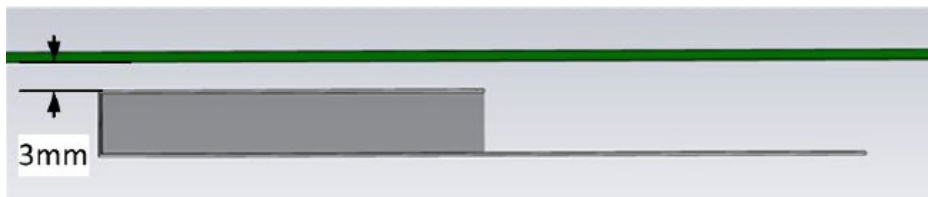


**Figure 32: Top clearance**

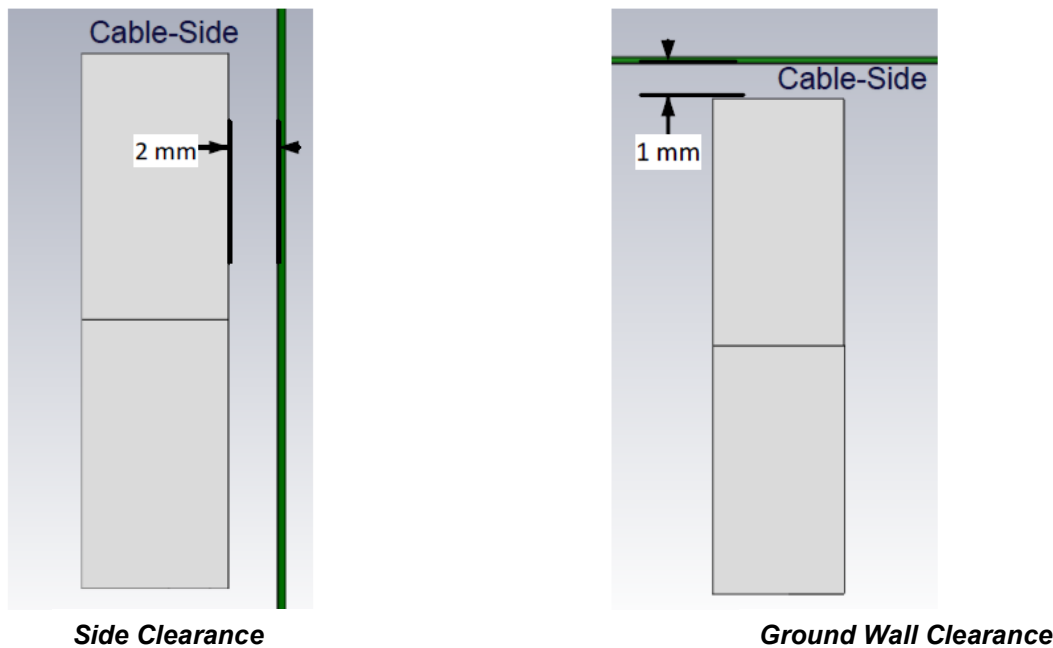

**Figure 33: Side and ground wall clearance**

The ideal material on which to mount the FlexPIFA is 1.5-millimeter thick polycarbonate for maximum performance. However, as previously mentioned, the FlexPIFA can tolerate other non-metallic surfaces and thicknesses and still radiate effectively. Depending on the type of material, the FlexPIFA may be detuned.

The coaxial cable feeding the FlexPIFA should be routed away from the antenna. Do not run the coaxial cable over the top of the FlexPIFA or near the tip of the main element. The cable should be routed perpendicular to the side of the FlexPIFA (this is the way the cable comes assembled) or away from the ground wall. These options are shown in [Figure 34](#).

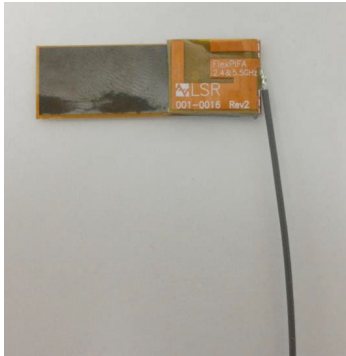

**Perpendicular to the Side**



**Away from the Ground Wall**

**Figure 34: Recommended cable routing**


As with any antenna, care should be taken not to place conductive materials or objects near the antenna (except as described in the next section). The radiated fields from the antenna induce currents on the surface of the metal; as a result, those currents then produce their own radiation. These re-radiating fields from the metal interfere with the fields radiating from the FlexPIFA (this is true for any antenna). Other objects, such as an LCD display, placed close to the antenna may not affect its tuning but it can distort the radiation pattern. Materials that absorb electromagnetic fields should be kept away from the antenna to maximize performance. Common things to keep in mind when placing the antenna:

- Wire routing
- Speakers – These generate magnetic fields
- Metal chassis and frames
- Battery location
- Proximity to human body
- Display screen – These absorb radiation
- Paint – Do not use metallic coating or flakes



## 7.1 Flex Limits of the mFlexPIFA

One of the unique features of the FlexPIFA is its ability to flex. However, due to the adhesive, there are limits as to how much the antenna can be flexed and remain secured to the device. The FlexPIFA should not be flexed in a convex position with a radius less than 16 millimeters. Going smaller than this may result in the antenna peeling off the surface over time. Should a tighter radius of curvature be required, contact Laird Connectivity for assistance.

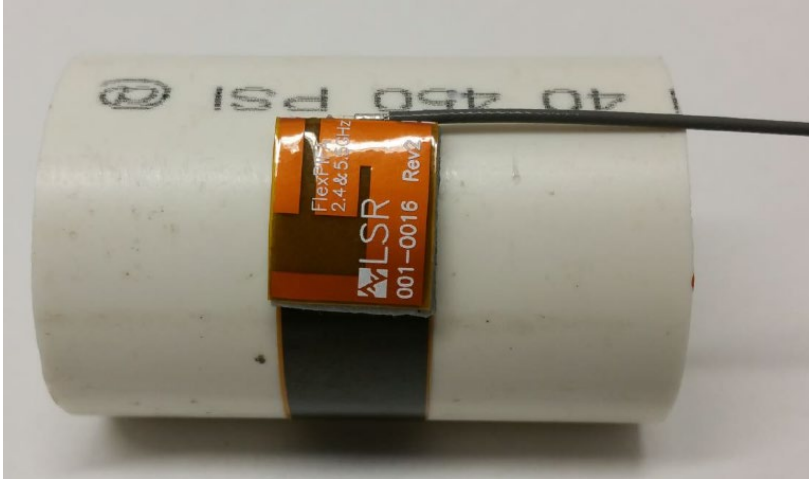

**Figure 35: Convex mounted**

The FlexPIFA should not be flexed in a concave position with a radius less than 25 millimeters. In this scenario, the limiting factor is performance. The ground plane of the antenna is pressed closer to the main element. As previously discussed in the introduction of this datasheet, the fringing fields developing off the end of the element are responsible for most of the radiation. In a concave position with a radius of curvature less than 25 millimeters, the fringing fields are adversely affected and gain suffers. If a tighter radius of curvature is required, contact Laird Connectivity for assistance.




**Figure 36: Concave-mounted**

The FlexPIFA is not designed to be twisted or crumpled. The adhesive back should lay flush with the surface on which it is mounted.

## 8. Mounting on Metal and Loaded Applications

The FlexPIFA can tolerate being mounted on conductive surfaces. There will be some detuning of the antenna, which translates into some gain reduction. Even though the FlexPIFA is optimized to work on non-metallic surfaces, it still radiates efficiently due to the fringing fields (see [Figure 31](#)). The ground plate of the FlexPIFA carries the adhesive backing; placing the antenna onto a metal surface simply enlarges the size of the ground beneath the main element. Previously, the fringing fields only interacted with the small ground of the FlexPIFA, however they are now interacting with the much larger ground. The fringing fields still develop and radiate, but the antenna will no longer tune as well to the 2.4 GHz frequency band. Consequently, the VSWR increases and there is some loss in radiated power. If the FlexPIFA cannot meet your range requirements after being implemented on a metal surface, contact Laird Connectivity for a custom antenna build to help meet your application needs.

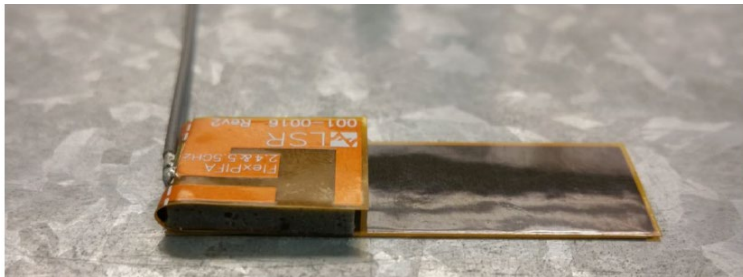

**Figure 37: FlexPIFA mounted on metal**


**Do not mount the FlexPIFA where metal is within ten millimeters above the main element** (see [Figure 39](#)). Not only does this severely limit the radiation pattern (mainly due to the re-radiation problem previously described) it detunes the antenna inside of this range.

Similarly, the two long sides of the FlexPIFA should be kept clear of any metal object by at least five millimeters. These keep out requirements pertaining to **conductive** materials only and are different from those listed in the previous sections which apply to non-conductive materials. In general, it is good practice to always keep metals as far away from the antenna as possible.

For the best performance, a spacer should be placed between the FlexPIFA and the conductive surface (see [Figure 38](#)). The spacer should be 1.5 millimeters thick polycarbonate. This will significantly improve performance and tuning of the FlexPIFA on a metal surface. Other **non-conductive** materials such as ABS plastic can be used; however, polycarbonate provides the best results.



**Figure 38: FlexPIFA mounted on metal Surface with 1.5 mm thick polycarbonate spacer**

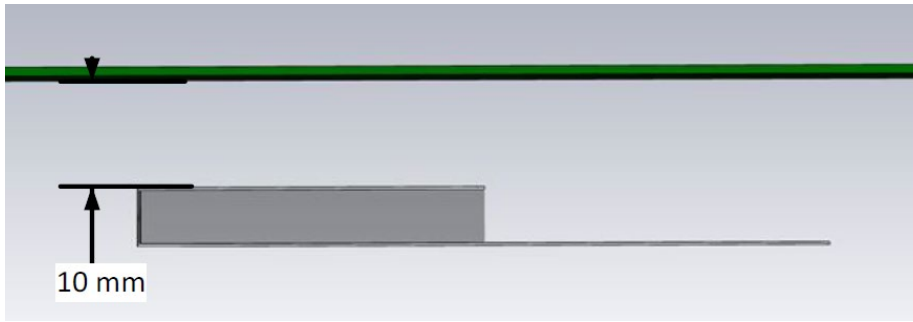

**Figure 39: Metal near main element**

For body-worn applications, the FlexPIFA can tolerate the presence of the human body. We do not recommend that you mount the antenna directly on body tissue to avoid detuning the FlexPIFA.

Additionally, the human body is an excellent absorber of 2.4 GHz RF signals. As a result, expect a reduction in range due to the presence of a body. In a body-worn application, the ground plate of the FlexPIFA should be closest to the body tissue. The main element should be pointed away from the body. Additionally, for handheld devices, the FlexPIFA should be mounted in a location where it is not covered by the hand. If the antenna is mounted in a location where the main element is covered or near a human body, ensure that there is at least a ten-millimeter separation distance between the main element and the body as shown in [Figure 39](#).

Additionally, when the FlexPIFA is mounted very close to body tissue, use a spacer to create separation distance between the body tissue and ground plate. This ensures maximum performance and prevents the antenna from detuning. As previously mentioned, the ideal spacer material is 1.5 mm thick polycarbonate.

Quite often this separation distance between the body tissue and the FlexPIFA is already provided by the enclosure. [Figure 40](#) is an example of a bracelet with the FlexPIFA integrated inside it. The enclosure provides enough spacing between the antenna and body tissue to prevent any major detuning. The enclosure is made of polycarbonate.




**Figure 40: FlexPIFA integrated into bracelet**

## 9. Product Revision History

001-0016

*Rev 1: Prototype Release*

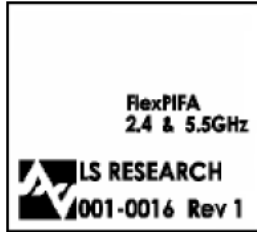


*Rev 2: Initial Production Release*




*Rev 3: Updated FPC (Improve Tuning)*



*Rev 4: Updated Silkscreen (Laird Logo and U.S. Patent)*

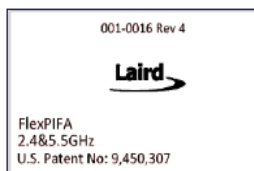

*Rev 5: Changed Supplier - Color Change to Antenna*

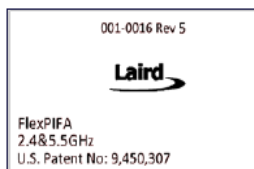

## 10. Additional Assistance

Please contact your local Laird Connectivity sales representative or our support team for further assistance:

### Support Center

<https://www.lairdconnect.com/resources/support>

### Phone

Americas: +1-800-492-2320 Europe: +44-1628-858-940 Hong Kong: +852 2762 4823

### Web

<https://www.lairdconnect.com/internal-antennas>

### Address

Laird Connectivity

50 S. Main Street, Suite 1100

Akron, OH 44308